

1.	0317004	R-10	CP Cover				
2.	0301168	A-71	Inside Cover				
3A.	5301058	A-19-AC	Relief Valve, White (Closet)- 12 per pkg.				
3B.	5301059	A-19-AU	Relief Valve, Black (Urinal)- 12 per pkg.				
3C.	5301211	A-19-ALC	Relief Valve, Green (Closet/Urinal-LC)- 12 per pkg.				
3D.	5301143	A-19-AL	Relief Valve, Blue (9 Liter Closet) - 12 per pkg.				
4.	5301111	A-15-A	Disc - for all Inside Parts Kits - 12 per pkg.				
5.	5301188	A-156-A	Diaphragm - for all Inside Parts Kits - 12 per pkg.				
6A.	5301236	A-163-A	Guide Assem. 4.5 gpf/17.0 Lpf Closet &				
			1.5 gpf/5.7 Lpf Urinal -12 per pkg.				
6B.	5301032	A-152-A	Guide Assem. 3.5 gpf/13.2 Lpf Closet - 12 per pkg.				
6C.	5301031	A-151-A	Guide Assem. 1.6 gpf/6.0 Lpf LC Closet - 12 per pkg.				
6D.		A-155-A	Guide Assem. 1.0 gpf/3.8 Lpf LC Urinal - 12 per pkg.				
6E.	5301157	A-157-A	Guide Assem. 0.5 gpf/1.9 Lpf Urinal - 12 per pkg.				
7.		SEE INSIDE PARTS KITS CHART ON THE REVERSE SIDE					
8.	5302297	B-39	Seal - 12 per pkg.				
9.	5302279	B-32-A	CP Handle Assem 6 per pkg.				
	0302390	B-73	CP Handicap Handle Assem. (A.D.A. Compliant)				
10.		A-6	CP Handle Coupling				
11.		B-7-A	CP Socket Assem.				
12.		B-32	CP Handle Grip - 12 per pkg.				
	0302389	B-74-A	CP Handicap Handle Grip (A.D.A. Compliant)				
	5302305	B-50-A	Handle Repair Kit - 6 per pkg.				
14.		A-31	Handle Gasket - 48 per pkg.				
15.		F-54-A	<sup>3</sup> /4" CP Spud Coupling Assem				
	0306142	F-55-A	1 <sup>1</sup> /4" CP Spud Coupling Assem.				
	0306145	F-56-A	1 <sup>1</sup> /2" CP Spud Coupling Assem.				
16.	3323192	V-551-A	Vacuum Breaker Repair Kit				
17.	5323005	V-500-AA	3/4" x 9" CP Vacuum Breaker - 6 per pkg.				
	5323006	V-500-AA	11/4" x 9" CP Vacuum Breaker - 6 per pkg.				
10	5323007	V-500-AA	1 <sup>1</sup> /2" x 9" CP Vacuum Breaker - 6 per pkg.				
18.		H-550	CP Stop Coupling				
19.		H-551-A	CP Adjustable Tailpiece 21/16" long				
20.	5308696	H-553	O-Ring - 24 per pkg.				

21.	0388029	H-740-A	1" Screwdriver Bak-Chek <sup>®</sup> Stop CP - complete
	0388031	H-740-A	3/4" Screwdriver Bak-Chek® Stop CP - complete
22.	3308853	H-541-A	1" Control Stop Repair Kit *
	3308856	H-543-A	3/4" Control Stop Repair Kit **
23.	0308991	H-639	CP Bonnet *
	0308601	H-538	CP Bonnet **
24.	5308156	H-37	CP Cap - 6 per pkg.
25.	5310034	J-2/J-7	Bumper Assem 6 per pkg.

\* for use with H-740 1" & 3/4" and H-540-A 1" Screwdriver Bak-Chek® Control Stops \*\* for use with H-540-A 3/4" Screwdriver Bak-Chek® Control Stops

MASTER FLUSHOMETER REBUILDING KITS								
Includes Items 7-13-16 & 20								
CODE NO.	KIT NO.	DESCRIPTION						
3317001	R-1001-A	Rebuild Kit (4.5 gpf/17.0 Lpf) Closet/Service Sink						
3317002	R-1002-A	Rebuild Kit (1.5 gpf/5.7 Lpf) Urinal						
3317003	R-1003-A	Rebuild Kit (3.5 gpf/13.2 Lpf) Closet						
3317004	R-1004-A	Rebuild Kit (1.6 gpf/6.0 Lpf) Closet						
3317005	R-1005-A	Rebuild Kit (1.0 gpf/3.8 Lpf) LC Urinal						
3317011	R-1011-A	Rebuild Kit (0.5 gpf/1.9 Lpf) Urinal						
3317012	R-1012-A	Rebuild Kit (2.4 gpf/9.0 Lpf) Closet						
WASHER SET								
3301089	A-156-AA	Washer Set - Includes: 4, 5, 8 & 14						

The information contained in this document is subject to change without notice.

## SLOAN VALVE COMPANY • 10500 SEYMOUR AVENUE • FRANKLIN PARK, IL 60131

Phone: 1-800-9-VALVE-9 or 1-847-671-4300 • Fax: 1-800-447-8329 or 1-847-671-4380 • http://www.sloanvalve.com

```
Made in the U.S.A.
```

REGAL M.G. - Rev. 2a (05/03)

Code No. 0816185

# Troubleshooting and Maintaining the Sloan Regal<sup>®</sup> Flushometer

1.						
	PROBLEM: FI CAUSE:	ushometer does not function. (a.) Control Stop or Main Valve is closed. (b.) Handle Assembly is worn.		SOLUTION:	(a.) (b.)	Screw the two Install NEW Ins Flushometer.
	SOLUTION:	<ul> <li>(c.) Relief Valve is worn.</li> <li>(a.) Open Control Stop or Main Valve.</li> <li>(b.) Install Sloan Handle Repair Kit (B-50-A) or replace handle.</li> <li>(c.) Replace Inside Parts Kit.</li> </ul>			(c.) (d.) (e.)	Replace Relief N Replace with pr Install Handle R
2	PRORIEM. Ins	ufficient volume of water to adequately siphon fixture.	5.	PROBLEM:		h of flush is too
۷.	CAUSE:	<ul><li>(a.) Control Stop not open enough.</li><li>(b.) Urinal Flushometer Parts inside a Closet Flushometer.</li></ul>		CAUSE:	(a.)	Relief Valve (A- is clogged beca closed by an in
		(c.) Low Consumption Flushometer installed on a non-Low			(b.)	Line pressure h
		Consumption fixture. (d.) Water Saver Kit installed in old, non-Water Saver bowl.				Valve to seat.
		(e.) Inadequate volume or pressure at supply.			(C.)	A-19-AC (Whit
	SOLUTION:	(a.) Adjust Control Stop for desired delivery of water.			(d.)	1 or 11/2 gpf L Inside Cover is
		(b.) Replace Inside Urinal Parts with proper Closet Flushometer Parts.		SOLUTION:	(u.) (a.)	Disassemble th
		(c.) Replace A-41-A Inside Parts Kit with A-38-A Water Saver				IMPORTANCE F
		<ul> <li>Kit.</li> <li>Position Refill Head A-170 so that SIDE 1 is in the <u>UP</u> Position.</li> </ul>				UPPER CHAMB ENLARGE OR D IF CLEANING D
		(e.) If no gauges are available to properly measure supply pressure or volume of water at the Flushometer, then remove the Relief Valve from the Inside Parts Kit,			(b.)	Shut off all cont
		reassemble the Flushometer and open the Control Stop.			(C.)	Replace with A-
		• If the fixture siphons, more water volume is required. If a			(d.)	Replace the Ins
		3.5 gpf Inside Parts Kit is installed in the Flushometer, then first flip the Refill Head (under the Diaphragm) to obtain a	6.	PROBLEM: CAUSE:		ering noise in I The A-156-A Se
					( )	down.
					(b.)	The Inside Cove
		Kit A-175-A (# 0301104). IMPORTANT: Laws and		SOLUTION,	(0)	
		<b>Regulations requiring Low Consumption Fixtures (1.6 gpf</b>		SULUTION.	(a.)	
					(b.)	Replace Inside
					( )	
			7.			ing at Handle A
		steps must be taken to increase the pressure and/or supply.		CAUSE:	· · /	
			1		(D.) (C.)	
2		Fluchameter closes off immediately	1		(0.)	Valve Handle B
З.				SOLUTION:	(c.) (a.)	Install new B-39
З.	PROBLEM: CAUSE:	<ul> <li>first Tlip the Refill Head (under the Diaphragm) to obtain a 4.5 gpf volume. If this volume is still inadequate, remove the Flow Ring from the Guide to obtain a 6.5 gpf Kit. If additional flow is still required, try a Low Pressure Guide Kit A-175-A (# 0301104). IMPORTANT: Laws and Regulations requiring Low Consumption Fixtures (1.6 gpf Water Closets and 1.0 gpf Urinals) prohibit the use of higher flushing volumes.</li> <li>If fixture does not siphon or if a Low Consumption fixture is installed, or if the above steps do not prove satisfactory,</li> </ul>	6. 7.	CAUSE: SOLUTION:	(a.) (b.) (a.) (b.) <b>Leaki</b> (a.) (b.)	The A-156-A down. The Inside Ca abuse. Replace the S instructed by Replace Insi <b>ing at Handle</b> The B-39 Se Handle gask

SOLUTION:

Enlarged By-Pass onlice from corrosion or damage Install Inside Parts Kit to correct above problems and

update Flushometer.

#### **PROBLEM:** Length of flush is too short (Short Flushing). 4

- Diaphragm Assembly and Guide Assembly are not hand-CAUSE: (a.) tiaht.
  - Enlarged By-pass orifice from corrosion or damage. (b.)
  - (C.) A-19-AU (Black) Urinal Relief Valve in Closet Flushometer.
  - A-41-A Low Consumption Kit installed in non-Low (d.) Consumption fixture.
  - Handle Assembly is worn. (e.)

- assemblies hand-tight.
  - side Parts Kit to correct problem and update
  - Valve with A-19-AC (White) Closet Relief Valve.
  - oper Inside Parts Kit.
  - epair Kit B-50-A or replace the Handle.

### long (Long Flushing) or fails to close off.

19-A) is not seating properly or Bypass orifice ause of foreign material, or Bypass orifice is visible gelatinous film from "over-treated" water.

- as dropped and is not sufficient to force Relief
- te) Closet Relief Valve has been used in a Jrinal.
- cracked or damaged.
- he working parts and wash thoroughly. ORIFICE IN THE BY-PASS IS OF UTMOST OR PROPER METERING OF WATER INTO THE BER OF THE FLUSHOMETER. DO NOT DAMAGE THIS ORIFICE. REPLACE INSIDE KIT OES NOT CORRECT PROBLEM.
  - trol stops until pressure has been restored, then
  - -19-AU (Black) Relief Valve.
  - ide Covèr (A-71).

#### Flushometer.

- egment Diaphragm has been installed upside-
- er has been distorted from wear, freezing or
- gment Diaphragm to the proper position as arkings on the Diaphragm. Cover.

#### ssembly.


- is worn or deteriorated.
  - has been omitted.
  - Bushing is worn.
- 9 Seal. NOTE: The B-39 Seal will easily slide -40 Bushing if it is wet.
  - Install A-31 Handle Gasket or Sloan Handle Repair Kit (B-50-A). (b.)
  - (C.) Install Sloan Handle Repair Kit (B-50-A).

#### CARE AND CLEANING INSTRUCTIONS

DO NOT use abrasive or chemical cleaners to clean Flushometers, they may dull the luster and attack the chrome or special decorative finishes. Use ONLY soap and water, then wipe dry with a clean towel or cloth.

While cleaning the bathroom tile, the Flushometer should be protected from any splattering of cleaner. Acids and cleaning fluids can discolor or remove chrome plating.

If further assistance is required, please contact the Sloan Valve Company Installation Engineering Dept. at 1-888-SLOAN-14.

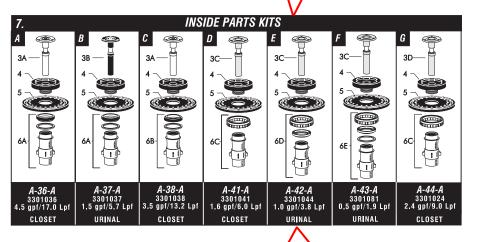

## SLOAN VALVE COMPANY • 10500 SEYMOUR AVENUE • FRANKLIN PARK, IL 60131

Phone: 1-800-9-VALVE-9 or 1-847-671-4300 • Fax: 1-800-447-8329 or 1-847-671-4380 • http://www.sloanvalve.com