


SMART BIDET

OWNER'S MANUAL
ELECTRONIC TOILET SEAT

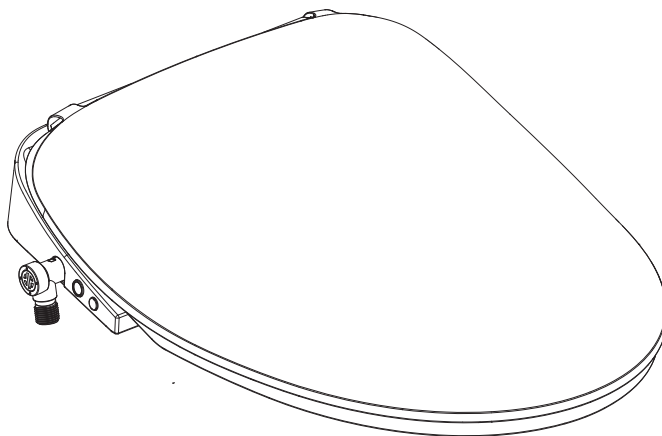

L U X A R T.

TABLE OF CONTENTS

SAFETY PRECAUTIONS01

PARTS DIAGRAM 05

PRODUCT OVERVIEW 05

CONTROL PANEL..... 06

PRODUCT INSTALLATION..... 07

TOOLS NEEDED 07

PARTS INCLUDED 07

BEFORE INSTALLATION..... 08

INSTALLATION STEPS..... 09

PRODUCT OPERATION 11

BASIC FUNCTIONS 11

DRYER..... 13

UV STERILIZATION 13

OTHER FUNCTIONS..... 14

RESTORING FACTORY SETTINGS..... 14

MAINTENANCE..... 15

TROUBLESHOOTING..... 17

PRODUCT INFORMATION19

SPECIFICATIONS..... 19

PRODUCT HIGHLIGHTS 20

SMART BIDET FEATURES..... 20

CONTACT US..... 20











WARRANTY 22

SAFETY PRECAUTIONS

















IMPORTANT! READ ALL INSTRUCTIONS BEFORE USING

Please carefully read this manual before use and keep it for future reference.

The following icons are used in this manual to indicate varying severities of hazards. Please abide by these precautions, otherwise serious consequences may occur.

NOTATION		
WARNING	• • • •	Please pay close attention to avoid serious harm or accidents.
ATTENTION	• • • •	If not attentive, body or property damage may result.
	• • • •	Caution! Comply with guidelines.
	• • • •	Prohibited action!
	• • • •	Do not dismantle!
	• • • •	Keep away from direct contact with water or any liquid.
	• • • •	Do not touch this area!
	• • • •	Do not touch this area with wet hands!
	• • • •	Keep away from fire!
	• • • •	Operate as instructed.
	• • • •	Please unplug!
	• • • •	Please confirm it is grounded!

SAFETY PRECAUTIONS

⚠ WARNING	
Before you begin, make sure your power supply is grounded. ▶ Otherwise, electric shock may occur. ▶ Please consult a qualified electrician if your power supply is not grounded.	
Do not touch or plug in the cord with wet hands. ▶ Otherwise, electric shock may occur.	
Do not connect power cord if the cord is damaged or broken. ▶ Electric shock or fire may occur.	
The product must be connected to standard voltage power source (AC 120V±10%, Max Current 1.5A). ▶ Electric shock or fire may occur.	
Do not forcefully pull, break, bend, strip, twist, or over squeeze the power cord and cable. ▶ Electric shock or fire may occur.	
The cord must be replaced by authorized personnel. ▶ Electric shock or fire may occur.	
Please avoid installing the product while bathroom is wet. Do not splash water on the product. ▶ Electric shock, fire, or other damage may occur.	
Do not place lit cigarettes or other ignited items on your smart bidet. ▶ Fire may occur.	
Do not place lit cigarettes or other ignited items on your smart bidet. ▶ Otherwise, the device may be damaged or malfunction.	
When the seat or lid is broken, please unplug the power and shut down the water supply. ▶ Electric shock or fire may occur.	
Unplug and clean the dust on the power cord with a dry cloth regularly. ▶ Fire may occur due to bad insulation.	
Individuals who are handicapped (physically, mentally, or emotionally) should be accompanied during use. ▶ Injury may occur.	
Children should not play with this product. ▶ Injury may occur.	
Do not dismantle this product to repair or remodel. Only Authorized personnel such as a qualified electrician should service the product. ▶ Malfunctions may cause electric shock, fire, or injury.	
Do not urinate on the product. ▶ Electric shock may occur.	
Do not use a polluted water supply. ▶ The water may damage the device or harm the user.	

SAFETY PRECAUTIONS

⚠️ ATTENTION


If using any chemical toilet bowl cleaner, be sure to wipe up any spills that splash onto the plastic areas of the product. Do not use any acidic chemical detergent. Only mild detergents are permitted.
▶ Otherwise, the plastic may break and cause body damage, electric shock, or fire.

Toilet Cleaner


Chemicals

Thinner


Do not stand, sit, or lean forcefully on the lid of the bidet toilet seat. Do not open or close the lid/seat ring forcefully to avoid damage.



Do not block the dryer door with hands or other objects. Do not cover the door during use.

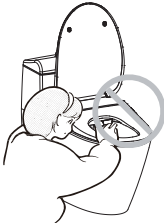

Please do not let water or detergent wet the bidet toilet seat or power plug.
▶ There may be a risk of electric shock or fire.




/03/


SAFETY PRECAUTIONS

⚠️ WARNING


Do not use warm or heated temperature settings for extended periods of time.




Please make sure the user is fully seated (see image below). Otherwise, the cleaning or drying function will stop.




Do not urinate on the wand.
▶ The wand may become obstructed.




Please use provided accessories to install the device. Do not use old parts.
▶ Leakage may occur.




During power failure, unplug the device and close the water supply valve to prevent leaking.




Do not expose to direct sunlight or heating device.




Do not use a timer power source or external switch to turn the device on/off. The thermal cutoff device may cause danger.




Please turn off the water supply before replacing the filter. Firmly attach the filter before opening the water supply.
▶ Leakage may occur.



Please unplug and close water sources to the device when away for extended periods of time.
▶ Leakage or fire may occur.




In very low temperatures, the water within the device may freeze after long periods of disuse. To avoid damage, please warm the unit to melt the ice.




/04/

PARTS DIAGRAM


PRODUCT OVERVIEW

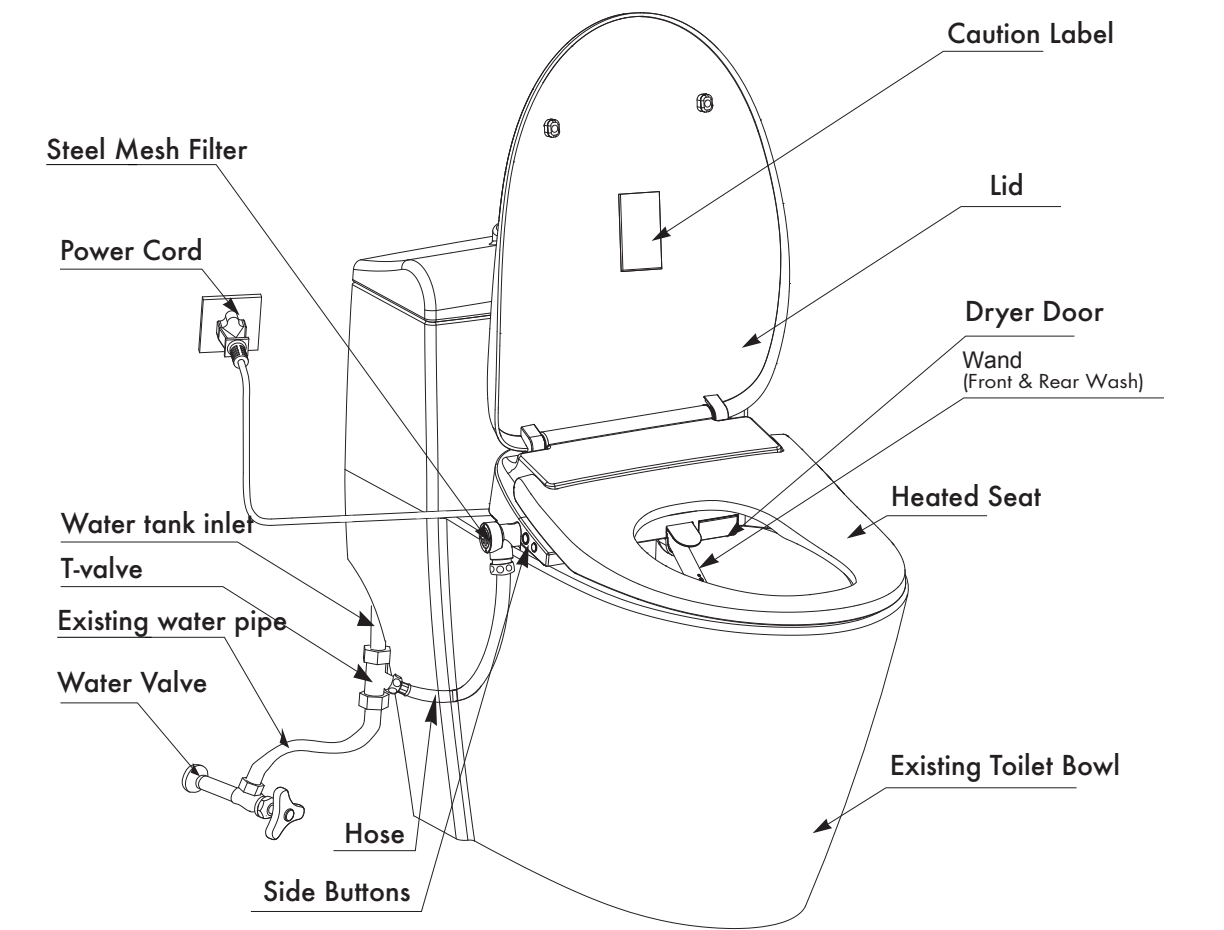

VIEW FROM THE RIGHT

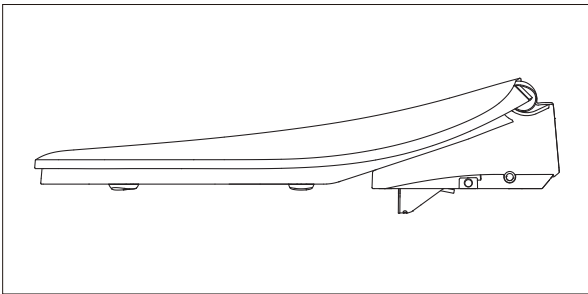


VIEW FROM THE LEFT

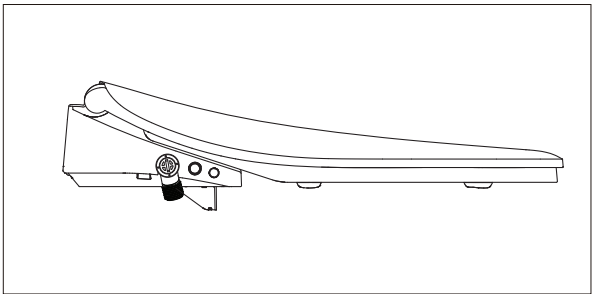

PARTS DIAGRAM


REMOTE CONTROL

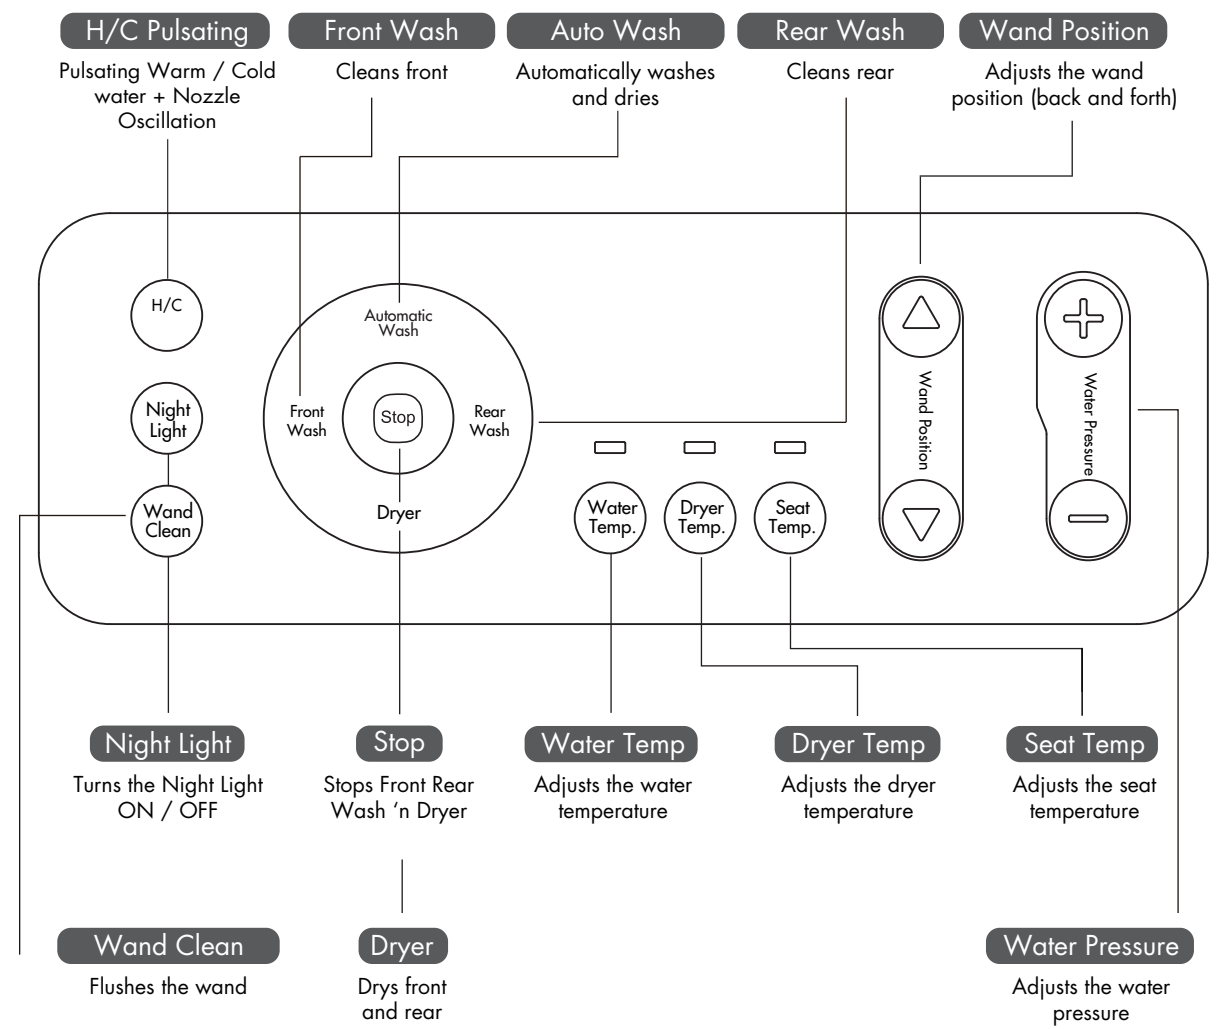


PRODUCT INSTALLATION

TOOLS NEEDED










Adjustable Wrench (1.02in+ width) OR Open End Wrench (0.91-1.02in)



Phillipshead Screw Driver



PARTS INCLUDED

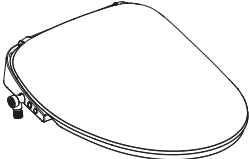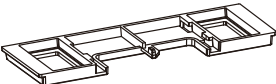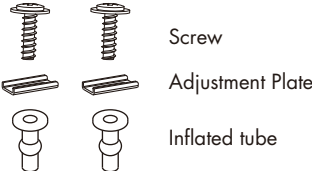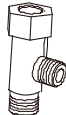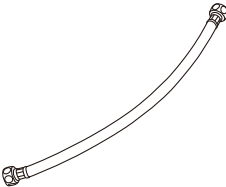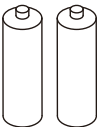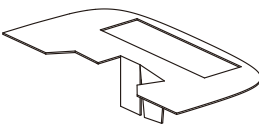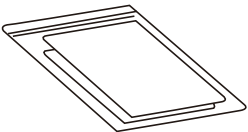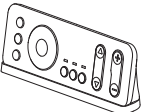Smart Bidet (1 set) 	Catch Plate (1 pc) 	Screw components (2 sets) 
T-valve (1 pc) 	Hose (1 pc) 	AAA Battery(2 pcs) 
Fixed Card (1 pc) 	Owner's Manual (1 pc) 	Remote Control  With a holder and two expansion screws

After opening the package, please confirm that you have received all parts listed above. If you are missing any parts, please contact us.

PRODUCT INSTALLATION

BEFORE INSTALLATION

IMPORTANT! Before installing the product, please make sure that you meet all the requirements listed below.

Power Requirements


- ▶ The power rating should be within the required range (AC 120V \pm 10%, Max current 10A above)
- ▶ The power outlet should be close enough to reach the power cord (47.24in) but far from where water can hit it.
- ▶ This product must be grounded.
 - The wiring should be installed by a professionally licensed electrician.
 - Please do not plug in the product before installation is complete to prevent malfunction.

Water Requirements




- ▶ The minimum dynamic water pressure required is 11.6psi.
- ▶ The maximum static water pressure required is 101.5psi.
- ▶ Water pressure below the min and max range above will affect the performance of the product.

Sizing Requirements

- ▶ Please measure your toilet to make sure that there is enough space for the bidet (20.4 in long).

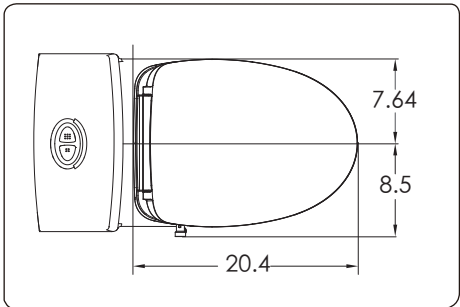

- ▶ The distance between the 2 mounting holes must be within 4.72-6.89 in.
- ▶ The distance from the filter to the bidet inlet should be 23.62 in or less.
- ▶ The distance between the mounting holes and the edge of the toilet bowl must be within 17.99-19.72 in.

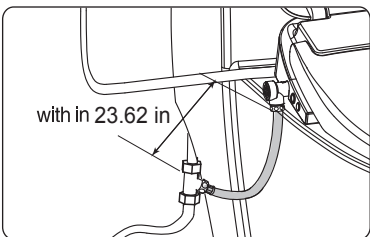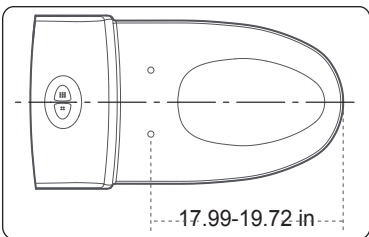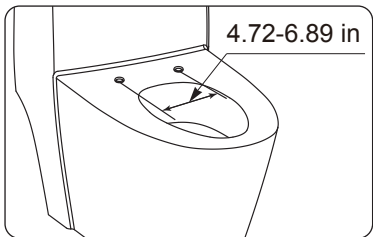


※The product has no Ground Fault Circuit Interrupter, It should be plugged into an outlet with a Ground Fault Circuit Interrupter to avoid the accidental failure of this product and the loss of life or property.

PRODUCT INSTALLATION


INSTALLATION STEPS

1 Install the Smart Bidet electronic toilet seat


1. Remove the existing toilet seat.
(a) Remove the toilet seat mounting bolts.
(b) Remove the existing toilet seat from the toilet.

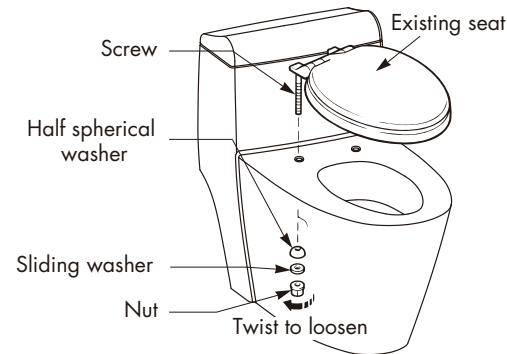

2. Insert the inflated rubber tube set into the mounting holes on the toilet bowl.

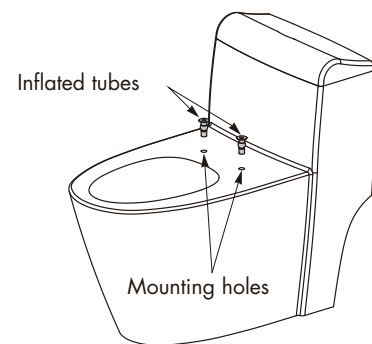


3. Place the Fixed Card on the toilet bowl where the mounting holes are. Make sure that the wash / dry gates are close to the rim and pointed down

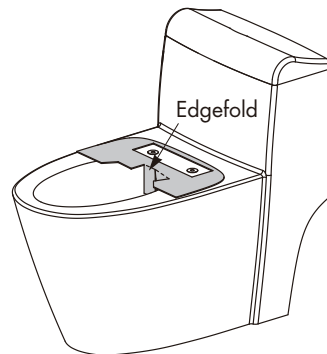


4. Install the Catch Plate
(a) Place the Catch Plate in the rectangular space of the Fixed Card. The arrow should point to the back of the toilet.
(b) Secure the Catch Plate using the adjustment plates and screws.

The ↑ sign should point towards the back of the toilet

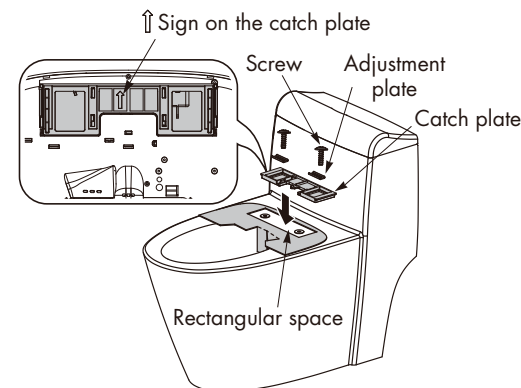

5. Install the electronic toilet seat
(a) Remove Fixed Card.
(b) Press the push rod button and slide the seat into the Catch Plate.
(c) Adjust the position of the seat and loosen the screws to adjust position, if necessary.

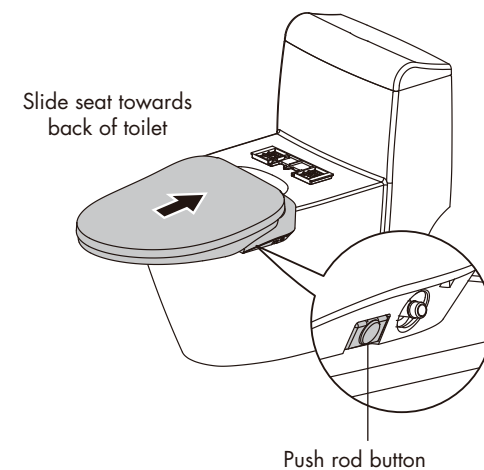


PRODUCT INSTALLATION


INSTALLATION STEPS CONTINUED

2 Install the filter and hoses


1. Connect T-valve to tank.

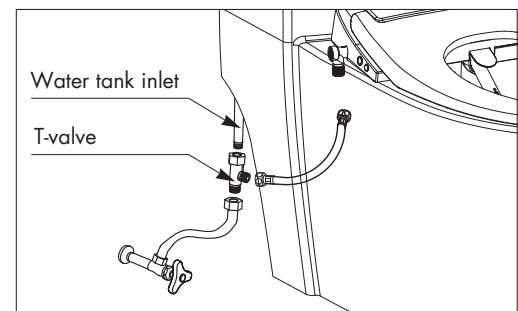


3. Connect the hose to T-valve.

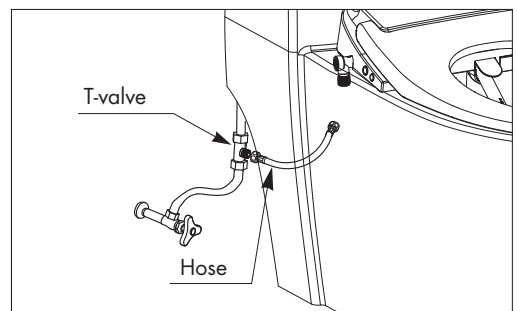

2. Existing water pipe connect T-valve.

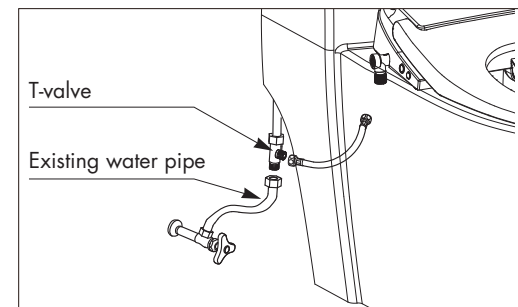


4. Connect the hose to bidet .

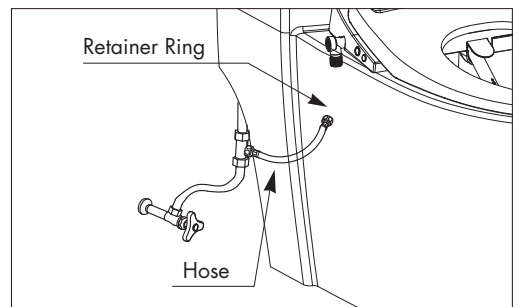


3 Turn on the water

1. Turn the water back on by turning the knob on the supply angle valve counter-clockwise until the valve is fully open.
2. Check all connections carefully and make sure that there is no water leakage from any connection.
If there is leaking from a connection, retighten the connection.

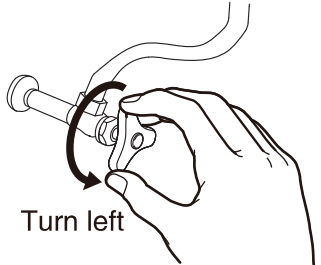

4 Link the power

1. Insert the bidet plug into the outlet (120V).

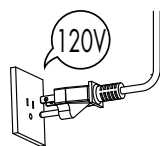


2. Confirm the power connection.
Press and hold down the power button for 0.5 seconds to turn on the bidet seat.

PRODUCT OPERATION


BASIC FUNCTIONS

- Functions will only work when user is seated on the bidet seat.
- Dryer will automatically stop after 4 minutes.

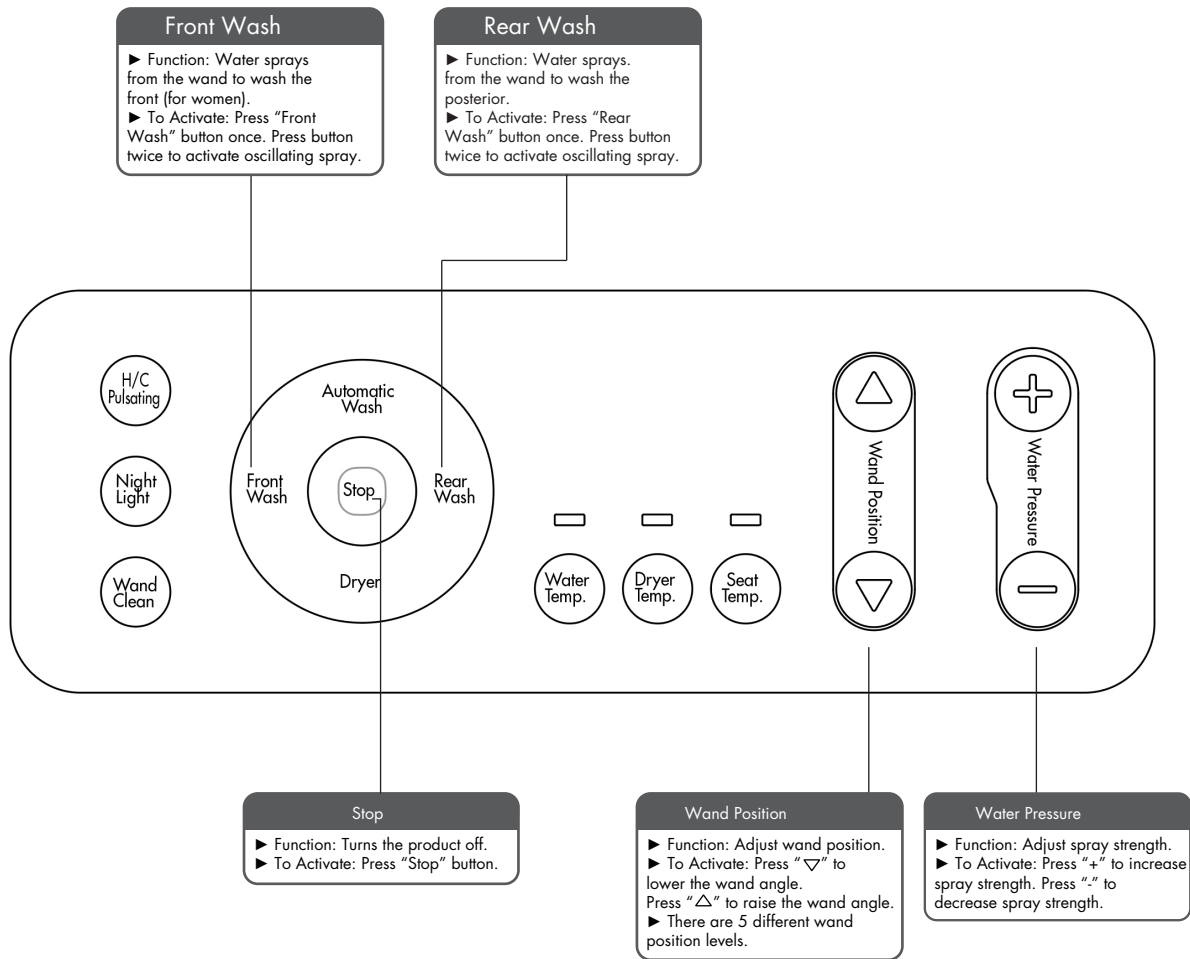

PRODUCT OPERATION


BASIC FUNCTIONS CONTINUED

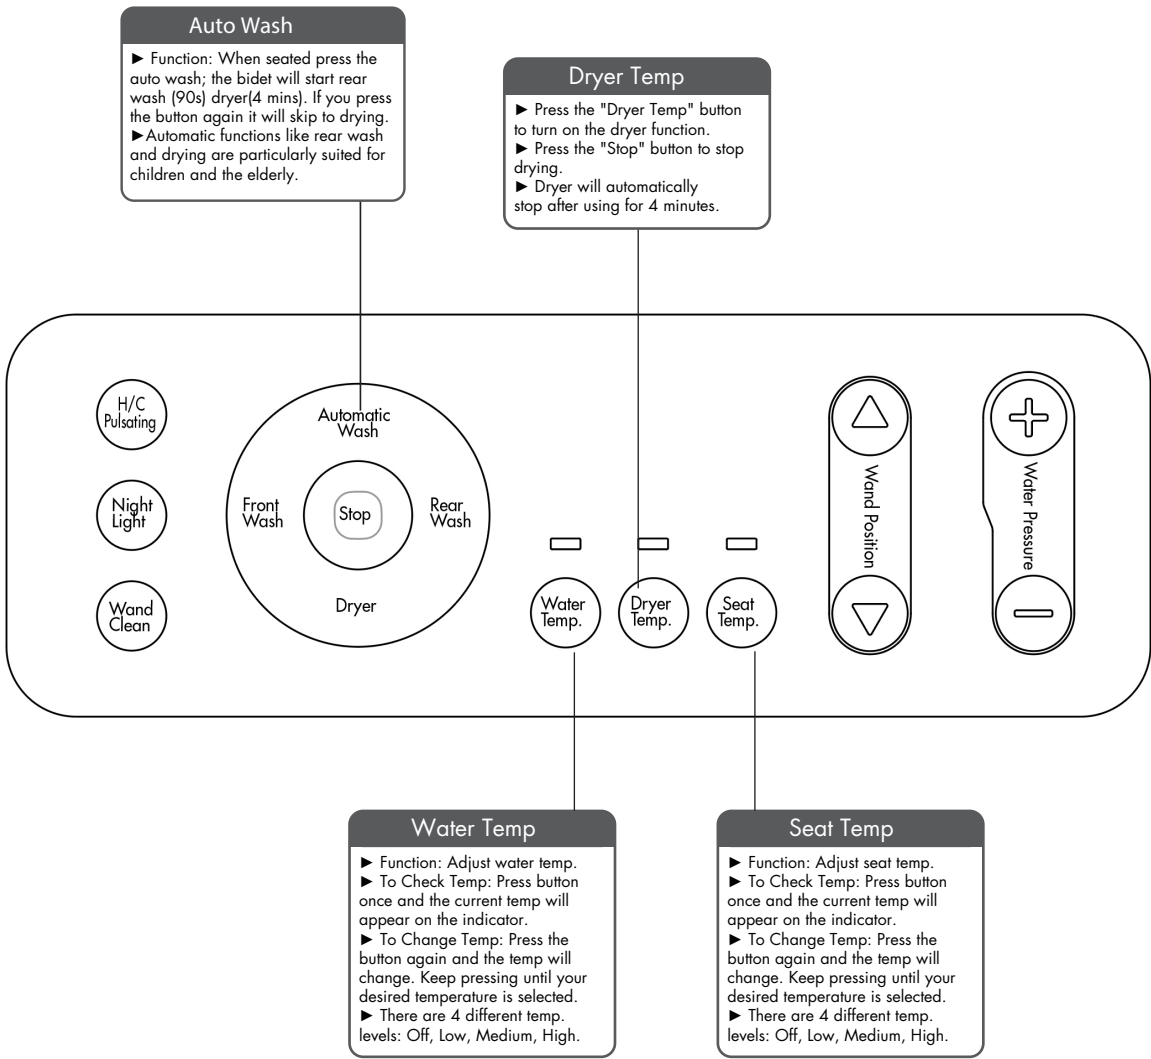

PRODUCT OPERATION

DRYER

► Dryer will automatically stop after 4 minutes.

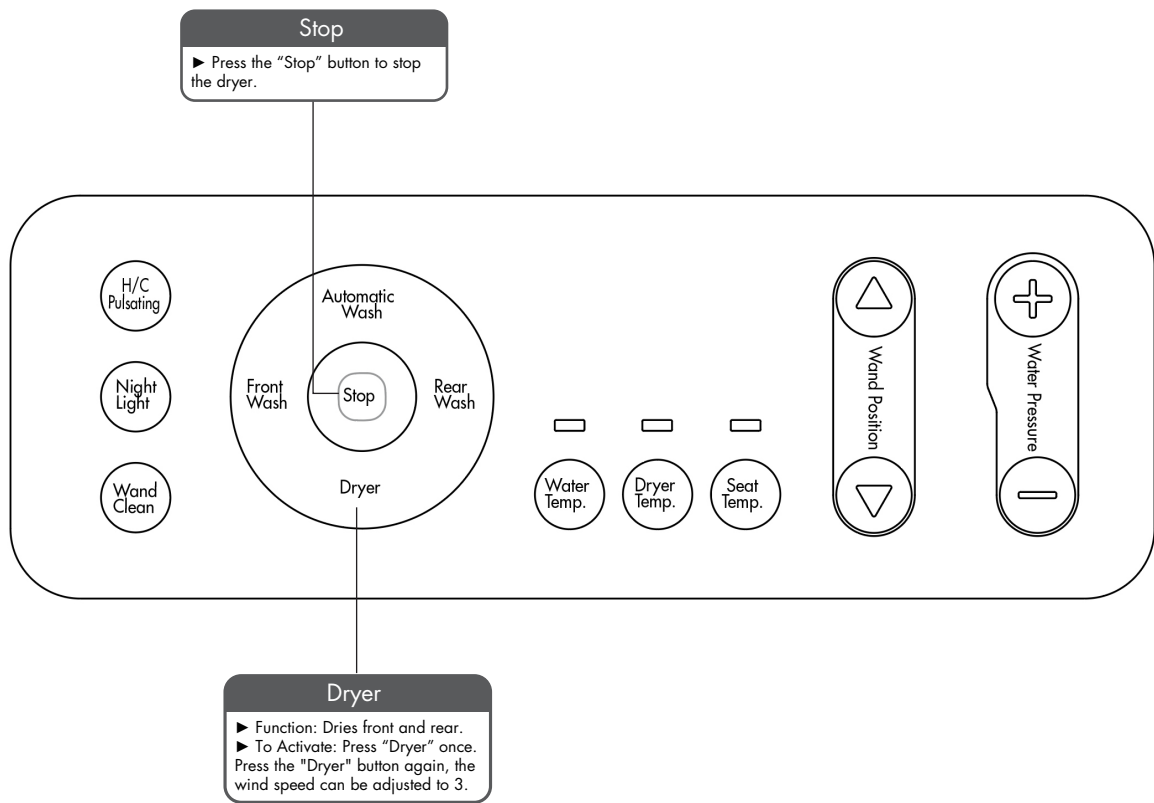


UV STERILIZATION

► The UV light will automatically turn on 10 seconds after the user rises from the seat and will remain active for 3 minutes. The UV sterilization indicator will turn red when UV sterilization is in progress and will turn off when complete.

PRODUCT OPERATION

OTHER FUNCTIONS

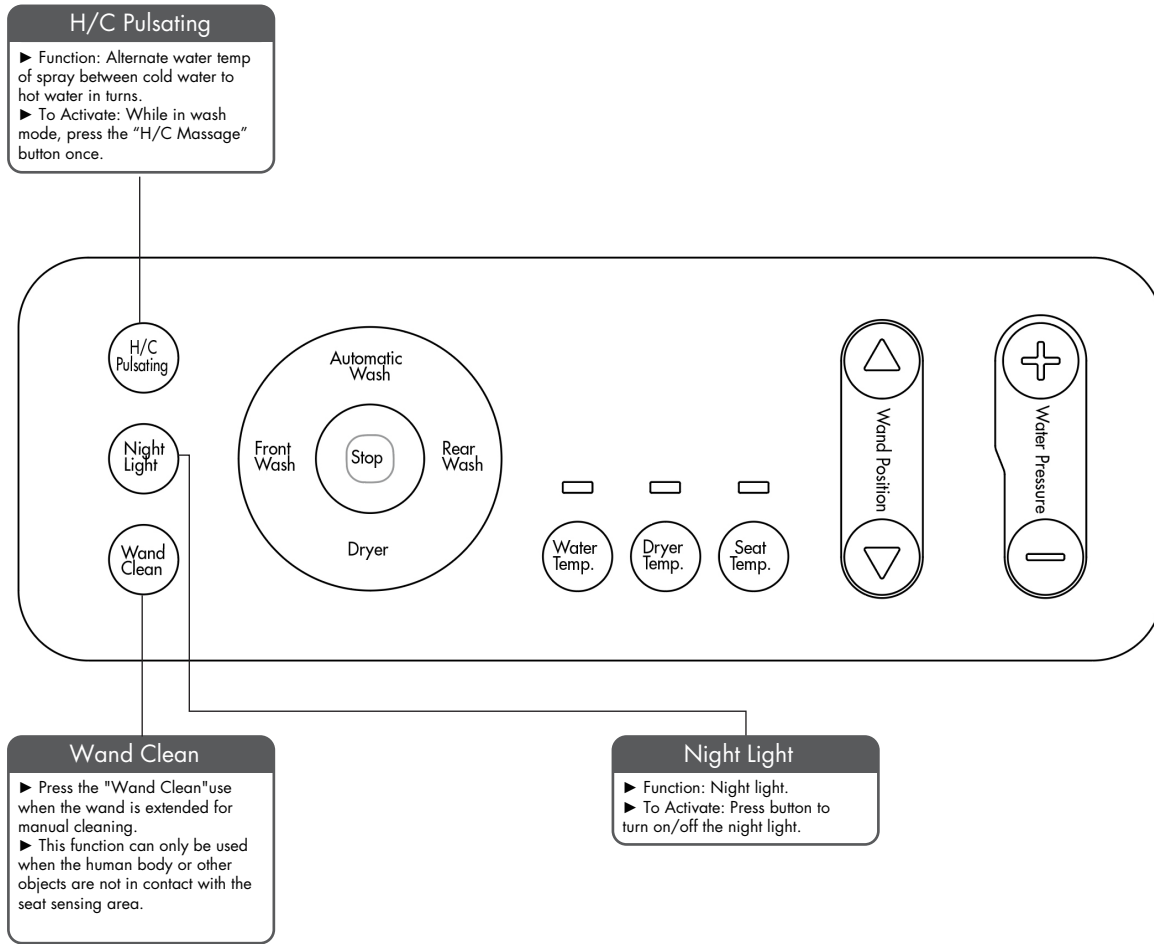

RESTORING FACTORY SETTINGS

► To restore the product to the original factory settings, pull the plug from the wall, wait 1 minute, then reconnect the plug. The Water Temp, Seat Temp, Dryer Temp, Spray Strength, and Wand Position will restore to the original Middle level settings.


PRODUCT OPERATION

MAINTENANCE

- ▶ Before performing maintenance, please unplug the power source and shut off the water supply.
- ▶ Regular maintenance is required to ensure that the product operates at optimum efficiency.

Maintenance of Lid, Seat, and Plastic Parts

- ▶ Wipe the lid, seat, and plastic parts with a wet soft cloth (water).
- ▶ Please wipe with water frequently or the product will become hard to clean later if the dirt and debris is not removed on time. Wiping with water can also help prevent static electricity from generating around the product, which can cause the product to accumulate dust and become dirty.
- ▶ For a deeper clean, the bidet can be removed from the toilet to access the surface beneath. To remove the bidet, press the catch plate button located on the right side of the bidet, then lift the bidet slightly to extract. (do not remove the bidet forcefully).

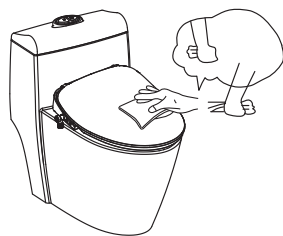

Maintenance of Steel Mesh Filter



- ▶ For your health, as well as optimal performance of the bidet, please clean or replace the filter regularly.
- ▶ If you notice that the water pressure is becoming weaker, please wash or replace the filter.
- ▶ Please make sure to turn off the water supply completely before removing the filter. Attach the new filter securely to avoid leakage.
- ▶ Turn the coin counterclockwise to open the filter and use a brush to clean.



Cleaning Recommended: Every 1-2 months

Maintenance of the Wand

- ▶ Press "Wand Clean" button without occupying the seat, the wand will extend and can be cleaned with a soft brush.
- ▶ Do not try to pull the wand out with force, or the wand may break.
- ▶ When the wand is clogged, it is recommended to replace it with a new one.

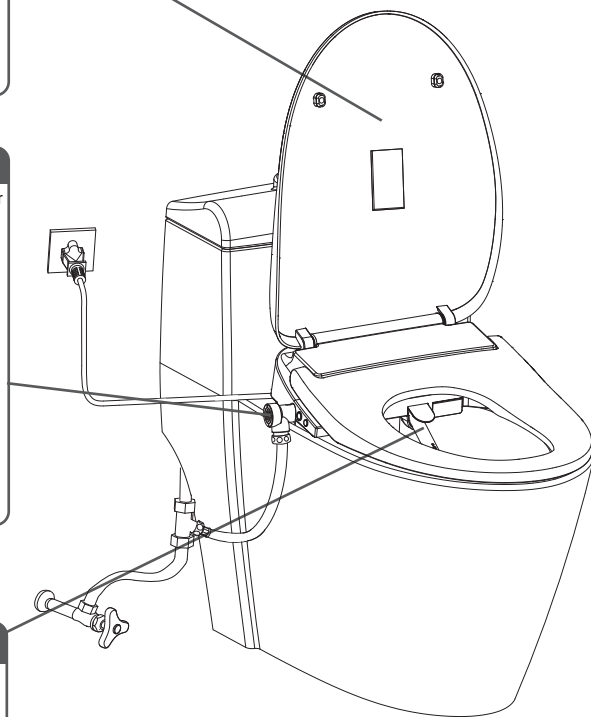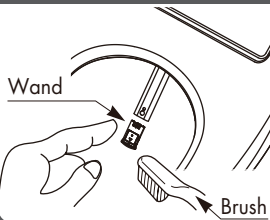

PRODUCT OPERATION

MAINTENANCE CONTINUED


! ATTENTION

Do not spray water or detergent on the bidet, remote control, or power cord.
▶ Otherwise, electric shock or fire may occur.



! WARNING

While cleaning the plastic parts, do not use strong, acidic chemical cleaners (concentrated sulfuric acid, nitric acid, glacial acetic acid, carbon tetrachloride, chloroform, acetone, butyl ketone, benzene, toluene, phenol, cresol, methyl ether, methyl formamide, soybean oil, vinegar, 40% nitric acid, hydrochloric acid, 95% alcohol liquor, gasoline, kerosene, brake oil, etc.). Please only use mild cleaners.
▶ The plastic may break, and cause body damage, electric shock, or fire.

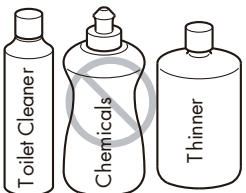

PRODUCT OPERATION

TROUBLESHOOTING

► If you experience any of the problems below, please follow the suggested solutions. If you continue to experience issues after trying the solutions, please consult with a qualified electrician or serviceman.

Power button		
Problem	Possible Causes	Possible Solutions
Toilet is not working	Disconnected or loose power cord	Check that power cord is plugged in
	Power off (Power indication light not on)	Press power button until indication light turns on
	Electronic malfunction	Unplug power cord, re-connect, then power on. If it is still not working, please unplug again and contact us
Wash functions		
Problem	Possible Causes	Possible Solutions
Water does not spray	No water in the supply	Wait for the water to restore to its normal levels
	Water supply is turned off	Turn water supply valve to turn on water
	Filter is stuck	Clean or replace filter
	Water hose is twisted	Stretch hose until it becomes untwisted
Water pressure is weak	Water level is set to LOW	Turn up water level to higher setting
	Filter is stuck	Clean or replace filter
Spray is off-center	Operational failure	Unplug device and re-plug in after 1 min
Water is not warm	Water temp. is set to LOW	Turn up water temp. level to higher setting
Water is leaking	Parts are loose or damaged	Contact us
Wash function does not activate	Check if the seat is lifted or sitting on something	Fix seat so it is flush on the bowl and remove any objects underneath
	Body sensor is broken	Contact us

PRODUCT OPERATION

TROUBLESHOOTING CONTINUED

Dryer		
Problem	Possible Causes	Possible Solutions
Dryer is not warm	Dryer temp. is set to OFF	Turn up dryer temp. to higher setting
	Dryer is broken	Contact us
Dryer stops during use	Dryer will stop every 4 mins	Enable dryer again
Heated Seat		
Problem	Possible Causes	Possible Solutions
Seat temp. not warm	Seat temp. is set to OFF	Turn up seat temp. to higher setting
	Power-saving mode on	Turn off power-saving mode
Other		
Problem	Possible Causes	Possible Solutions
Lid or seat closes fast	Slow-close is broken	Contact us
Bidet non-stop cycling through functions	QA testing model activated	Unplug device and re-plug in after 1 min

PRODUCT INFORMATION

SPECIFICATIONS

Model Number		BIDET SEAT
Rated Voltage		AC 120V, 60Hz
Rated Power		1050W
Environmental Temp		41°F~104°F
Water Inlet Environment		41°F~104°F
The range of water inlet pressure	Minimum necessary water pressure	11.6psi, and also make sure the water flow is above 2.3L/10s
	Maximum water pressure	101.5psi (in a static condition)
Flushing	Way for heating	Transient heating
	Temp pf warm water	Off/about 86°F~104°F
The length of power line		47.24in
The size of product		20.4" x 16.14"x 5.24"

PRODUCT HIGHLIGHTS

SMART BIDET FEATURES

- ▶ Functions will only work when user is seated on the bidet seat.
- ▶ Dryer will automatically stop after 4 minutes.
- ▶ Always-on heated seat with adjustable temperature settings
- ▶ LED night light illuminates bowl
- ▶ Warm air dryer with adjustable speed and temperature
- ▶ Remote control operated
- ▶ Remote stored in a convenient wall-mount bracket
- ▶ Hybrid heater for continuous-heated, filtered water
- ▶ Front and rear wash modes
- ▶ Automatic wash mode that also dries
- ▶ Pulsating and Oscillating spray modes
- ▶ Adjustable water temperature and pressure
- ▶ Self-cleaning stainless steel wand with UV light self-sanitation
- ▶ Low profile, non-obtrusive design
- ▶ White, plastic elongated seat with slow, quiet close
- ▶ Tight bumpers hold seat firmly in place
- ▶ Easy clean and change for quick and easy seat removal
- ▶ Antimicrobial seat coating inhibits the growth of microorganisms
- ▶ Easy to install, plugs into a standard 120V outlet
- ▶ All parts are included for standard installation
- ▶ 3 year warranty

CONTACT US

If you have any questions or comments, please feel free to reach out to our customer service team at any time at **CustomerService@LuxartCollection.com** and we will be able to assist you further.

Thankyou for choosing us.



Bidet Toilet Seat Warranty

The manufacturer warrants that for a period of three years from purchase by the original consumer purchaser, the product will be free of all defects in material and workmanship that would impair the intended and proper use of the product. If the product is installed in a commercial application, the above mechanical warranty shall be limited to a period of 18 months from the date of purchase of the product.

Bidet Toilet Seats Function and Finish – Three Year Limited Warranty

The manufacturer warrants against deterioration of the product for a period of three years from purchase by the original consumer purchaser. If the product is installed in a commercial application, the above warranty shall be limited to a period of 18 months from the date of purchase of the product. The warranty excludes damage due to aggressive air or water conditions, or harsh or abrasive cleaners and/or materials*.

If a defect is found in normal use during the warranty period, the manufacturer will, at the manufacturer's election, repair the product, or provide a replacement part or product. Repair or replacement of the product is the sole and exclusive remedy. Damage caused by the defect (other than to the product itself) or by accident, misuse, or abuse is not covered by this warranty. Proof of purchase (original sales receipt) must be provided to the manufacturer with all warranty claims. The manufacturer is not responsible for indirect, incidental, consequential damages incurred in installation, repair, or replacement of the product. In no event shall the liability of the manufacturer exceed the purchase price of the product. Any damages to this product as a result of misuse, abuse, or neglect or any use of other than genuine Luxart brands replacement parts WILL VOID THE WARRANTY. This warranty is to the original consumer purchaser only, and excludes product damage due to installation error, product abuse, or product misuse, whether performed by a contractor, service company, or the consumer.

THIS IS THE SOLE AND EXCLUSIVE WARRANTY BY THE MANUFACTURER, WHICH DOES NOT MAKE ANY OTHER WARRANTY OF ANY KIND, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE MANUFACTURER DISCLAIMS ANY LIABILITY FOR SPECIAL, INCIDENTAL, EXEMPLARY, PUNITIVE OR CONSEQUENTIAL DAMAGES EVEN IF ADVISED OF THE POSSIBILITY OF THE SAME.

Some states do not allow the exclusion or limitation of implied warranties or the incidental consequential or other damages set forth above, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty applies only to products installed in the United States of America and Canada.

If you have any questions or concerns regarding our warranty plan, please contact us at
CustomerService@LuxartCollection.com

The manufacturer recommends using a professional plumber for all installation and repair.

*Never use cleaners such as thinner, benzene, acidic chemicals, chloride, hydrochloric acid detergent, powdered detergents or nylon brush usage or other products not recommended for plastic. This will void the warranty.

**Effective July 1, 2023, due to an update in California law, the start date for product warranties will now be aligned with the date of delivery of the product. This change is for all Mainline products purchased on or after July 1, 2023 by California consumers. (California Legislative Information AB-2912)*



L U X A R T.