

605-2

Thermostat Application Guide

Description	
Gas or Oil Heat	Yes
Electric Furnace	Yes
Heat Pump (No Aux. or Emergency Heat)	Yes
Heat Pump (With Aux. or Emergency Heat)	No
Multi-Stage Systems	No
Heat Only Systems	Yes
Heat Only Systems - Floor or Wall Furnace	Yes
Cool Only Systems	Yes
Millivolt	Yes

Table of Contents

	Page
Installation Tips	2-3
Thermostat Quick Reference	4-5
Wiring	6
Wiring Diagrams	7-8
Features	9
Technician Setup	10-13
Programming Thermostat	13-16

Specifications

The display range of temperature ... 41°F to 95°F (5°C to 35°C)
 The control range of temperature.... 44°F to 90°F (7°C to 32°C)
 Swing (cycle rate or differential) Heating is adjustable from 0.2° to 2.0°
 Cooling is adjustable from 0.2° to 2.0°
 Power source 18 to 30 VAC, NEC Class II, 50/60 Hz for hardwire
 Battery power from 2 AA Alkaline batteries
 Operating ambient 32°F to +105°F (0°C to +41°C)
 Operating humidity 90% non-condensing maximum
 Dimensions of thermostat 4.7"W x 4.4"H x 0.8"D

1 © U.S. Registered Trademark. Patents pending
 Copyright © 2019 All Rights Reserved.

Rev. 1918

Power Type

Battery Power
 Hardwire (Common Wire)
 Hardwire (Common Wire) with Battery Backup


A trained, experienced technician must install this product.

Carefully read these instructions. You could damage this product or cause a hazardous condition if you fail to follow these instructions.

Una version en espanol de este manual se puede descargar en la pagina web de la compania.

Wall Locations

The thermostat should be installed approximately 4 to 5 feet above the floor. Select an area with average temperature and good air circulation.

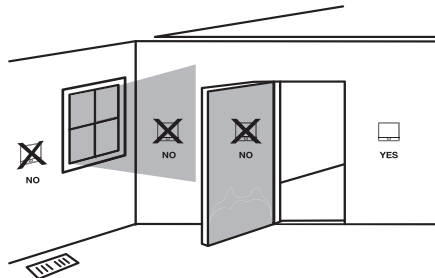

Installation Tip


Pick an installation location that is easy for the user to access. The temperature of the location should be representative of the building.

Do not install thermostat in locations:

- Close to hot or cold air ducts
- That are in direct sunlight
- With an outside wall behind the thermostat
- In areas that do not require conditioning
- Where there are dead spots or drafts (in corners or behind doors)
- Where there might be concealed chimneys or pipes

Subbase Installation

- 1 Horizontal Mount
- 2 Vertical Mount

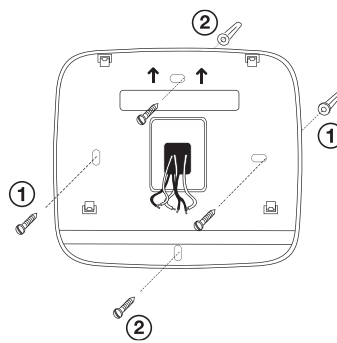

For vertical mount put one screw on the top and one screw on the bottom.
 For horizontal mount put one screw on the left and one screw on the right.

Installation Tip: Electrical Hazard

Failure to disconnect the power before beginning to install this product can cause electrical shock or equipment damage.


Mercury Notice

All of our products are mercury free. However, if the product you are replacing contains mercury, dispose of it properly. Your local waste management authority can give you instructions on recycling and proper disposal.

Installation Tips


Mount Thermostat

Align the 4 tabs on the subbase with corresponding slots on the back of the thermostat, then push gently until the thermostat snaps in place.

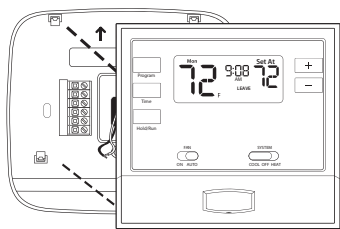

Battery Installation


Battery installation is recommended even if thermostat is hardwired (C terminal connected). When thermostat is hardwired and batteries are installed, the thermostat will activate a compressor delay of 5 minutes when the thermostat detects a power outage from the hardwired power supply.

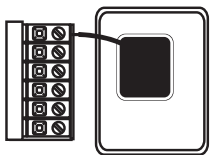

Important:

High quality alkaline batteries are recommended. Rechargeable batteries or low quality batteries do not guarantee a 1-year life span.

Insert 2 AA Alkaline batteries (included). High quality alkaline batteries are recommended.

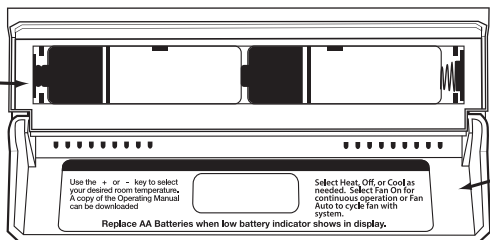


Simple operating instructions are found on the back of the battery door.

About The Badge


All of our thermostats use the same universal magnetic badge. Visit the company website to learn more about our free private label program.

Gently slide a screwdriver into the bottom edge of the badge. Gently turn the screwdriver counter clockwise. The badge is held on by a magnet in the well of the battery door. The badge should pry off easily. **DO NOT USE FORCE.**

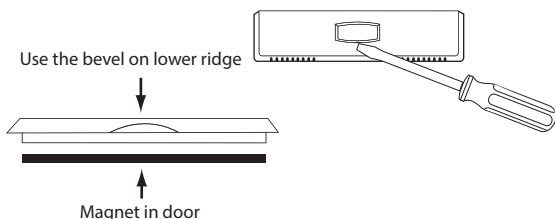


Thermostat Quick Reference

Getting to know your thermostat

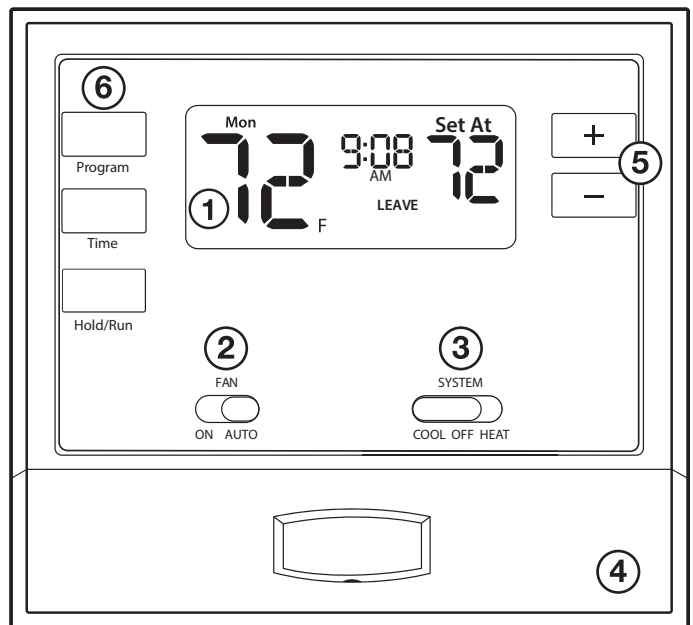

- 1 LCD Display
- 2 Fan Switch
- 3 System Switch
- 4 Easy change battery door
- 5 Temperature Setpoint Buttons
- 6 User Buttons

Getting to know your thermostat

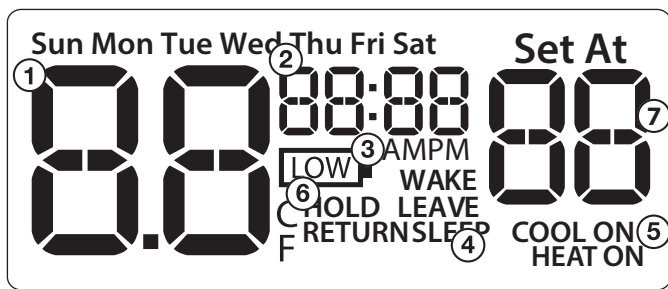

- ① **Indicates the current room temperature**
- ② **Time and day of the week**
- ③ **Low Battery Indicator:** Replace batteries when this indicator is shown.
- ④ **Program Time Periods:** This thermostat has 4 programmable time periods per day.
- ⑤ **System Operation Indicators:** ON will display when the COOL or HEAT is on. Compressor delay feature is active if Flashing.
- ⑥ **Hold** is displayed when the thermostat program is permanently overridden.
- ⑦ **Setpoint:** Displays the user selectable setpoint temperature.

Important

The low battery icon is displayed when the AA battery power is low. Whenever the thermostat detects low battery voltage from the AA batteries, the low battery icon will begin flashing on the screen for 21 days (if the batteries are not changed). If the batteries are not changed 22 days after the thermostat detects low battery voltage, the thermostat screen will only show the flashing battery icon until buttons are pressed. If the batteries are not changed 43 days after the thermostat detects low battery voltage, the thermostat screen will only show the flashing battery icon until buttons are pressed and the set points will offset to 85°F/29°C in cooling and 55°F/13°C in heating. At this stage, set point changes can be made temporarily but, the set points will change back to defaulted values after a 4-hour period. The thermostat will continue to perform this low battery flashing, temperature offset condition until the internal voltage threshold is reached. When the thermostat internal voltage threshold is reached, all relays will be opened and the thermostat will become inoperable until new batteries are installed.

5

Features

Temporary and Permanent Hold Feature

Note: This is a programmable thermostat, and will always be running a programmed schedule. However, it can be overridden with a Temporary or Permanent Hold.

Temporary Hold: With the system in Heat or Cool, anytime the SET-AT temperature is changed with the + or - buttons, the thermostat will enter a Temporary Hold. This will be indicated by "HOLD" flashing and will remain in this hold until the next programmed time period begins.

Permanent Hold: To enter a Permanent Hold, press the Hold/Run button while "HOLD" is flashing. The word "HOLD" will remain on continuously, indicating a Permanent Hold.

To Return to Running Schedule: To manually exit permanent hold and return to scheduled program, press Hold/Run button.

Wiring

1. If you are replacing a thermostat, make note of the terminal connections on the thermostat that is being replaced. In some cases the wiring connections will not be color coded. For example, the green wire may not be connected to the G terminal.
2. Loosen the terminal block screws. Insert wires then retighten terminal block screws.
3. Place nonflammable insulation into wall opening to prevent drafts.

Terminal Designations

C Common wire from system transformer	RH Transformer power for heating
O Heat pump changeover valve energized in cooling	RC Transformer power for cooling
B Heat pump changeover valve energized in heating	G Fan relay
W Heat relay	Y Compressor relay

Wiring Tips

RH & RC Terminals

For single transformer systems, leave the jumper wire in place between RH and RC. Remove jumper wire for two transformer systems.

Heat Pump Systems (With NO AUX or Emergency Heat)

If wiring to a heat pump, use a small piece of wire (not supplied) to connect terminals W and Y.

C Terminal

The C (common wire) terminal does not have to be connected when the thermostat is powered by batteries.

Wire Specifications

Use shielded or non-shielded 18-22 gauge thermostat wire.




Installation Tip: Do not overtighten terminal block screws, as this can damage the terminal block. A damaged terminal block can keep the thermostat from fitting on the subbase correctly or cause system operation issues. **Max Torque = 6in-lbs.**

6

Tech Settings

Gas or Electric Setup

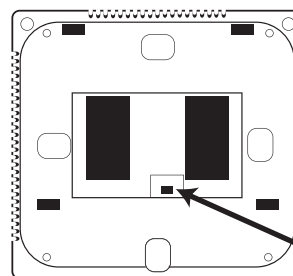

Gas: For systems that control the fan during a call for heat, put the fan operation switch to the GAS position.
Electric: For systems that do not control the fan during a call for heat, put the fan operation switch to the ELECTRIC position.


Fan Operation Switch

Gas: For all systems that control the fan during a call for heat, put the fan operation jumper pin to the **GAS** position.


Electric: Select Electric to have the thermostat control the fan during a call for heat.

- 1 Power supply
- 2 Factory-installed jumper. Remove only when installing on 2-transformer systems
- 3 Use either O or B terminals for changeover valve
- 4 Use a small piece of wire (not supplied) to connect W and Y terminals
- 5 Set fan operation setting to Electric
- 6 Optional 24 VAC common connection when thermostat is used in battery power mode


Typical 1H/1C System: 1 Transformer

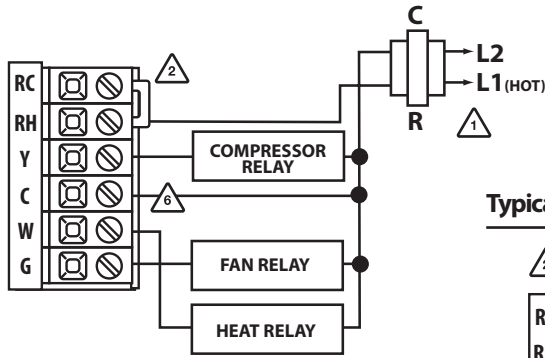


Typical 1H/1C System: 2 Transformer

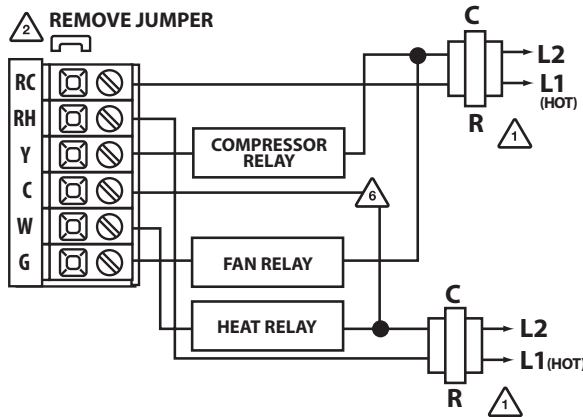


Typical Heat-Only System

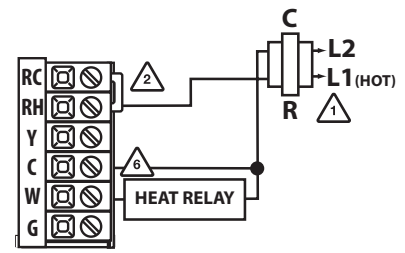


Typical Heat Only System With Fan

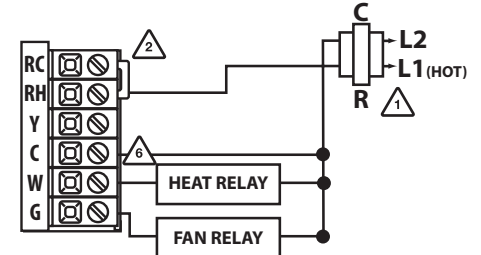

Typical Cool-Only System

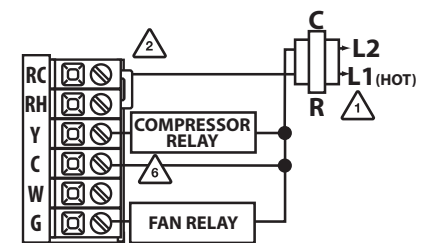

5 Typical 1H/1C Heat Pump System

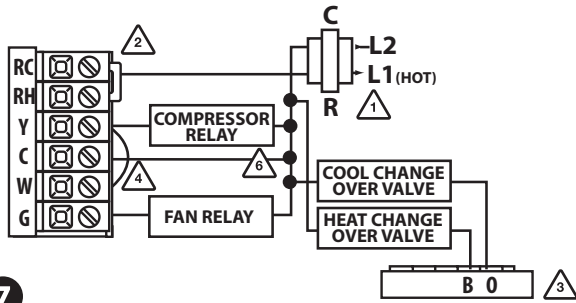

Tech Settings

Technician Setup Menu

This thermostat has a technician setup menu for easy installer configuration. To setup the thermostat for your particular application:

The Technician Setup Menu

1. To enter all other steps press and hold **+** and **-** buttons together for 3 seconds. This 3 second delay is designed so that homeowners do not accidentally access the installer settings.
2. Use **+** and **-** buttons to set.
3. Press the Program button to advance to the next step.
4. Press the time button to go back to the previous step.
5. Press the Hold/Run button to exit.

Swing Setting Tip

Temperature swing, sometimes called differential or cycle rate, can be customized for this individual application. For most applications choose a swing setting that is as long as possible without making the occupants uncomfortable.

Tech Settings	LCD Will Show	Adjustment Options	Default
Room Temperature Calibration		You can adjust the room temperature display to read 4° above or below the factory calibrated reading.	0
Compressor Short Cycle Delay		Selecting "ON" will not allow the compressor to be turned on for 5 minutes after the last time the compressor was switched off. Select "OFF" to remove this delay.	ON
F or C		F for Fahrenheit C for Celsius	F

Tech Settings

Tech Settings	LCD Will Show	Adjustment Options	Default
Cooling Swing		The cooling swing setting is adjustable from 0.2° to 2°. For example: A swing setting of 0.5° will turn the cooling on at approximately 0.5° above the setpoint and turn the cooling off at approximately 0.5° below the setpoint.	0.5
Heating Swing		The heating swing setting is adjustable from 0.2° to 2°. For example: A swing setting of 0.5° will turn the heating on at approximately 0.5° below the setpoint and turn the heating off at approximately 0.5° above the setpoint.	0.4
Cooling Setpoint Limit		This feature allows you to set a minimum cool setpoint value. The setpoint temperature cannot be lowered below this value.	44
Heating Setpoint Limit		This feature allows you to set a maximum heat setpoint value. The setpoint temperature cannot be raised above this value.	90
Morning Recovery		This feature will start heating early to bring the building temperature to its programmed setpoint by the beginning of the WAKE, OCCUPIED time period.	ON
Program Options		You can configure this thermostat to have 7 Day or 5+1+1 programming.	5d

Set Time

1. Press **TIME**
2. Day of the week will be flashing. Use the **+** or **-** key to select the current day of the week.
3. Press **PROGRAM**
4. The current hour is flashing. Use the **+** or **-** key to select the current hour. When using 12-hour time, make sure the correct a.m. or p.m. choice is selected.
5. Press **PROGRAM**
6. Minutes are now flashing. Use the **+** or **-** key to select current minutes.
8. Press the **TIME** button in order to go back a step.
7. Press **HOLD/RUN** when completed.

Programming

All of our programmable thermostats are shipped with an energy saving pre-program. You can customize this default program by following the steps on page 14.

Your thermostat can be programmed to have all the weekdays the same, a separate program for Saturday, and a separate program for Sunday. There are four time periods for each program (**WAKE, LEAVE, RETURN, SLEEP**).

Factory Default Program				
Day of the Week	Events	Time	Setpoint Temperature (HEAT)	Setpoint Temperature (COOL)
Weekday	Wake	6 AM	70°F (21°C)	75°F (24°C)
	Leave	8 AM	62°F (17°C)	83°F (28°C)
	Return	6 PM	70°F (21°C)	75°F (24°C)
	Sleep	10 PM	62°F (17°C)	78°F (26°C)
Saturday	Wake	6 AM	70°F (21°C)	75°F (24°C)
	Leave	8 AM	62°F (17°C)	83°F (28°C)
	Return	6 PM	70°F (21°C)	75°F (24°C)
	Sleep	10 PM	62°F (17°C)	78°F (26°C)
Sunday	Wake	6 AM	70°F (21°C)	75°F (24°C)
	Leave	8 AM	62°F (17°C)	83°F (28°C)
	Return	6 PM	70°F (21°C)	75°F (24°C)
	Sleep	10 PM	62°F (17°C)	78°F (26°C)

You can use the table below to plan your customized program schedule.

Custom Program				
Day of the Week	Events	Time	Setpoint Temperature (HEAT)	Setpoint Temperature (COOL)
Weekday	Wake			
	Leave			
	Return			
	Sleep			
Saturday	Wake			
	Leave			
	Return			
	Sleep			
Sunday	Wake			
	Leave			
	Return			
	Sleep			

Set Program Schedule

To customize your program schedule, follow these steps

Weekday:

1. Select **HEAT** or **COOL** with the system switch. **Note:** You have to program heat and cool each separately.
2. Press the **PROGRAM**
3. Monday-Friday is displayed and **WAKE** is shown. You are now programming the wake time period for the weekday setting.
4. Time is flashing. Use the **+** or **-** key to make your time selection for the weekday **WAKE** time period.
5. Press **PROGRAM**
6. The setpoint temperature is flashing. Use the **+** or **-** key to make your setpoint selection for the weekday wake period.
7. Press **PROGRAM**
8. Repeat steps 4 thru 7 for weekday **LEAVE** time period, for weekday **RETURN** time period, and for weekday **SLEEP** time period.

Saturday:

Repeat steps 4 thru 7 for the Saturday **WAKE** time period, **LEAVE** time period, **RETURN** time period, and for the Saturday **SLEEP** time period.

Sunday:

Repeat steps 4 thru 7 for the Sunday **WAKE** time period, **LEAVE** time period, **RETURN** time period, and for the Sunday **SLEEP** time period.



If using 7-Day Programming use previous steps for every individual day.

Operation Manual

Operation Manual


Table of Contents	Page
Table of Contents	1
Thermostat Quick Reference	2-4
Thermostat Operation	5-6
Warranty Information	7



Caution:

Equipment damage hazard. Do not operate the cooling system if the outdoor temperature is below 50°F (10°C) to prevent possible compressor damage.

Una version en español de este manual se puede descargar en la pagina web de la compañía.

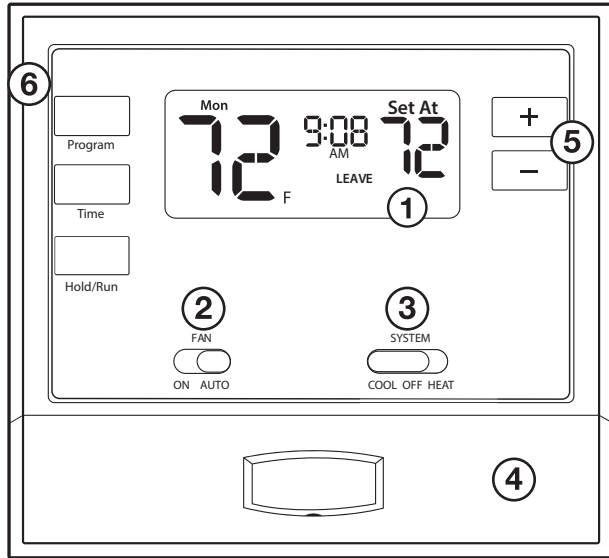


- ① LCD Display
- ② Fan Switch
- ③ System Switch
- ④ Easy change battery door
- ⑤ Temperature Setpoint Buttons
- ⑥ User Buttons

- ① **LCD Display**
See page 4 for details about this display read out.
- ② **Fan Switch**
Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is on.
- ③ **System Switch**
Selects the operation mode on your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off.
- ④ **Easy Change Battery Door**
See page 5 for details.
- ⑤ **Temperature Setpoint Buttons**
Press the + or - buttons to select the desired room temperature.
- ⑥ **User Buttons**
Use these buttons to set up your programming options. Refer to the next page for detail.



Caution:

When the battery icon **LOW** appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable. Freezing or over heating can occur.

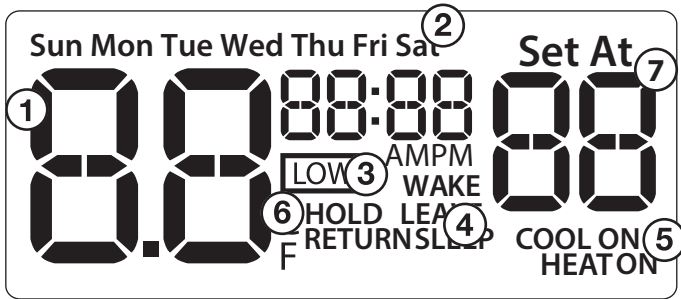


- ① **Indicates the current room temperature**
- ② **Time and day of the week**
- ③ **Low Battery Indicator:** Replace batteries when this indicator is shown.
- ④ **Program Time Periods:** This thermostat has 4 programmable time periods per day.
- ⑤ **System Operation Indicators:** ON will display when the COOL or HEAT is on. Compressor delay feature is active when flashing.
- ⑥ **Hold** is displayed when the thermostat program is permanently overridden.
- ⑦ **Setpoint:** Displays the user selectable setpoint temperature.



Important:


The low battery icon is displayed when the AA battery power is low. Whenever the thermostat detects low battery voltage from the AA batteries, the low battery icon will begin flashing on the screen for 21 days (if the batteries are not changed). If the batteries are not changed 22 days after the thermostat detects low battery voltage, the thermostat screen will only show the flashing battery icon until buttons are pressed. If the batteries are not changed 43 days after the thermostat detects low battery voltage, the thermostat screen will only show the flashing battery icon until buttons are pressed and the set points will offset to 85°F/29°C in cooling and 55°F/13°C in heating. At this stage, set point changes can be made temporarily but, the set points will change back to defaulted values after a 4-hour period. The thermostat will continue to perform this low battery flashing, temperature offset condition until the internal voltage threshold is reached. When the thermostat internal voltage threshold is reached, all relays will be opened and the thermostat will become inoperable until new batteries are installed.

Battery Door Information

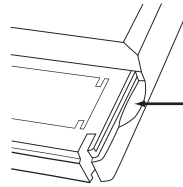

Use the finger bevel on the lower portion of the thermostat to open the easy access battery door.

Replace with 2 AA Alkaline Batteries. High quality Alkaline batteries are recommended.

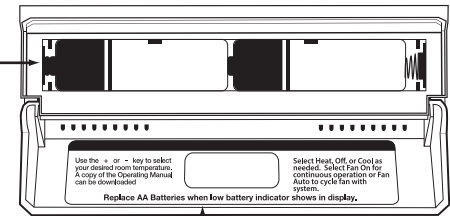

Simple operating instructions are found on the back of the battery door.

Temporary and Permanent Hold Feature

Note: This is a programmable thermostat, and will always be running a programmed schedule. However, it can be overridden with a Temporary or Permanent Hold.

Temporary Hold: With the system in Heat or Cool, anytime the set-at temperature is changed with the + or - buttons, the thermostat will enter a Temporary Hold. This will be indicated by "HOLD" flashing and will remain in this hold until the next programmed time period begins.

Permanent Hold: To enter a Permanent Hold, press the Hold/Run button while "HOLD" is flashing. The word "HOLD" will remain on continuously, indicating a Permanent Hold.

To Return to Running Schedule: To manually exit this hold and return to scheduled program, press Hold/Run button or cycle the System Switch.

Set Time

1. Press **TIME**
2. Day of the week will be flashing. Use the or key to select the current day of the week.
3. Press **TIME**
4. The current hour is flashing. Use the or key to select the current hour. When using 12-hour time, make sure the correct a.m. or p.m. choice is selected.
5. Press **TIME**
6. Minutes are now flashing. Use the or key to select current minutes.
7. Press **HOLD/RUN** when completed.

Set Program Schedule

To customize your program schedule, follow these steps

Weekday:

1. Select **HEAT** or **COOL** with the system switch. **Note:** You have to program heat and cool each separately.
2. Press the **PROGRAM**
3. Monday-Friday is displayed and **WAKE** is shown. You are now programming the wake time period for the weekday setting.
4. Time is flashing. Use the or key to make your time selection for the weekday **WAKE** time period.
5. Press **PROGRAM**
6. The setpoint temperature is flashing. Use the or key to make your setpoint selection for the weekday wake period.
7. Press **PROGRAM**
8. Repeat steps 4 thru 7 for weekday **LEAVE** time period, for weekday **RETURN** time period, and for weekday **SLEEP** time period.

Set Program Schedule

To customize your program schedule, follow these steps

Saturday:

Repeat steps 4 thru 7 for Saturday **WAKE** time period, **LEAVE** time period, **RETURN** time period, and for Saturday **SLEEP** time period.

Sunday:

Repeat steps 4 thru 7 for Sunday **WAKE** time period, **LEAVE** time period, **RETURN** time period, and for Sunday **SLEEP** time period.

Warranty Registration

Your new thermostat has a 2 year limited warranty. You must register your thermostat within 60 days of installation. Without this registration the warranty period will begin on date of manufacture. For warranty issues please contact the HVAC professional that installed this product. You can register your new thermostat in 2 ways:

Online

Go to the company website, select warranty registration and fill out a short registration form.

Mail

Complete the form below and mail it to the address shown.

Warranty Registration

Name: _____ Thermostat Model: _____

Address: _____ Date Installed: _____

City: _____ Complete form and mail to:

State: _____ **Thermostat Warranty Registration**

Zip: _____ Pro1iaq

P.O. Box 3377

Springfield, MO 65808-3377

**Cut Out For
Warranty Registration**

